


Wingshaft has 48 serrations. Lever can be mounted in any position indicated to suit individual installation. **UR-1** represents one serration up, lever to the right. DL-1 represents one serration down, lever to the left in relation to centerline of the wingshaft. Positions shown indicate centers of travel. One serration equals 7-1/2°.

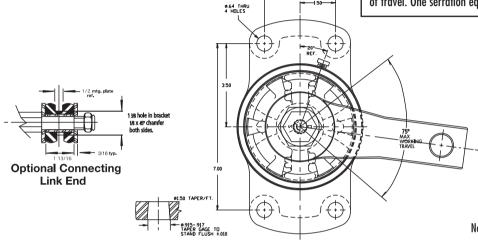

Note: All Dimensions are in Inches.

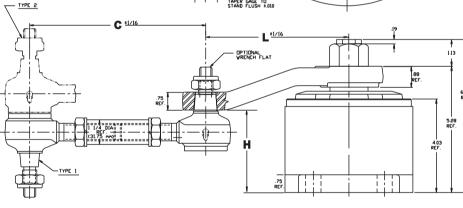

MOUNTING POSITIONS

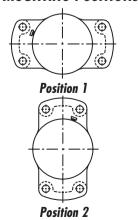

ROD END ASSEMBLY P/N 707832 3.28 REF.

LEVER CONFIGURATIONS TYPE 1

TYPE 2 TYPE 3

Hydraulic Rotary Shock Absorbers